


UXC-GSMX-E350

Example connection diagram

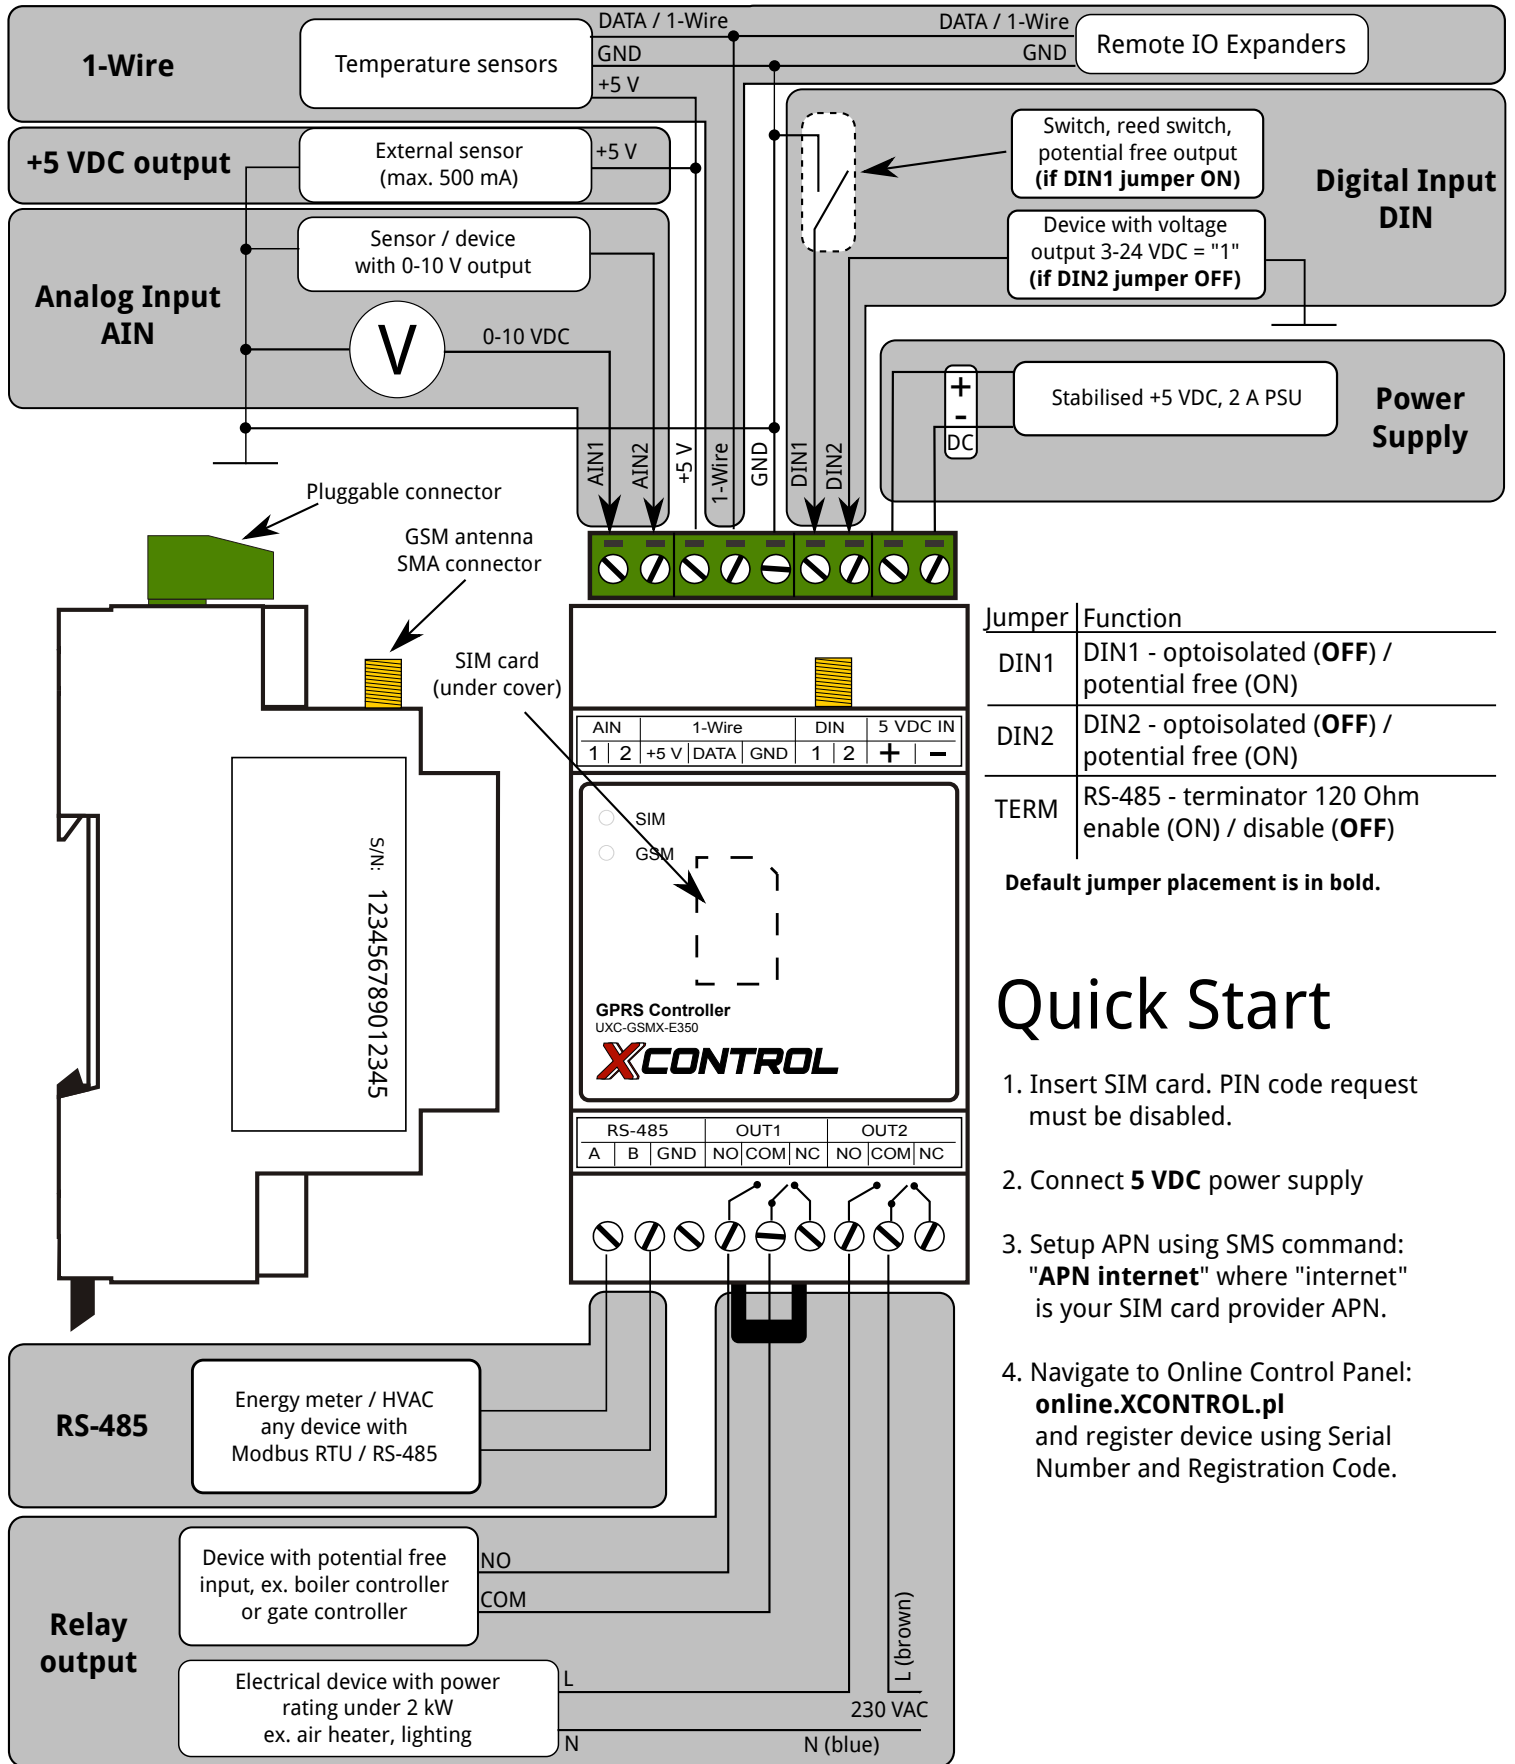

Jumper	Function
DIN1	DIN1 - optoisolated (OFF) / potential free (ON)
DIN2	DIN2 - optoisolated (OFF) / potential free (ON)
TERM	RS-485 - terminator 120 Ohm enable (ON) / disable (OFF)

Default jumper placement is in bold.

Quick Start

1. Insert SIM card. PIN code request must be disabled.
2. Connect **5 VDC** power supply
3. Setup APN using SMS command: "**APN internet**" where "internet" is your SIM card provider APN.
4. Navigate to Online Control Panel: **online.XCONTROL.pl** and register device using Serial Number and Registration Code.

Serial number

Registration code