


# UXEOW80

Example connection diagram

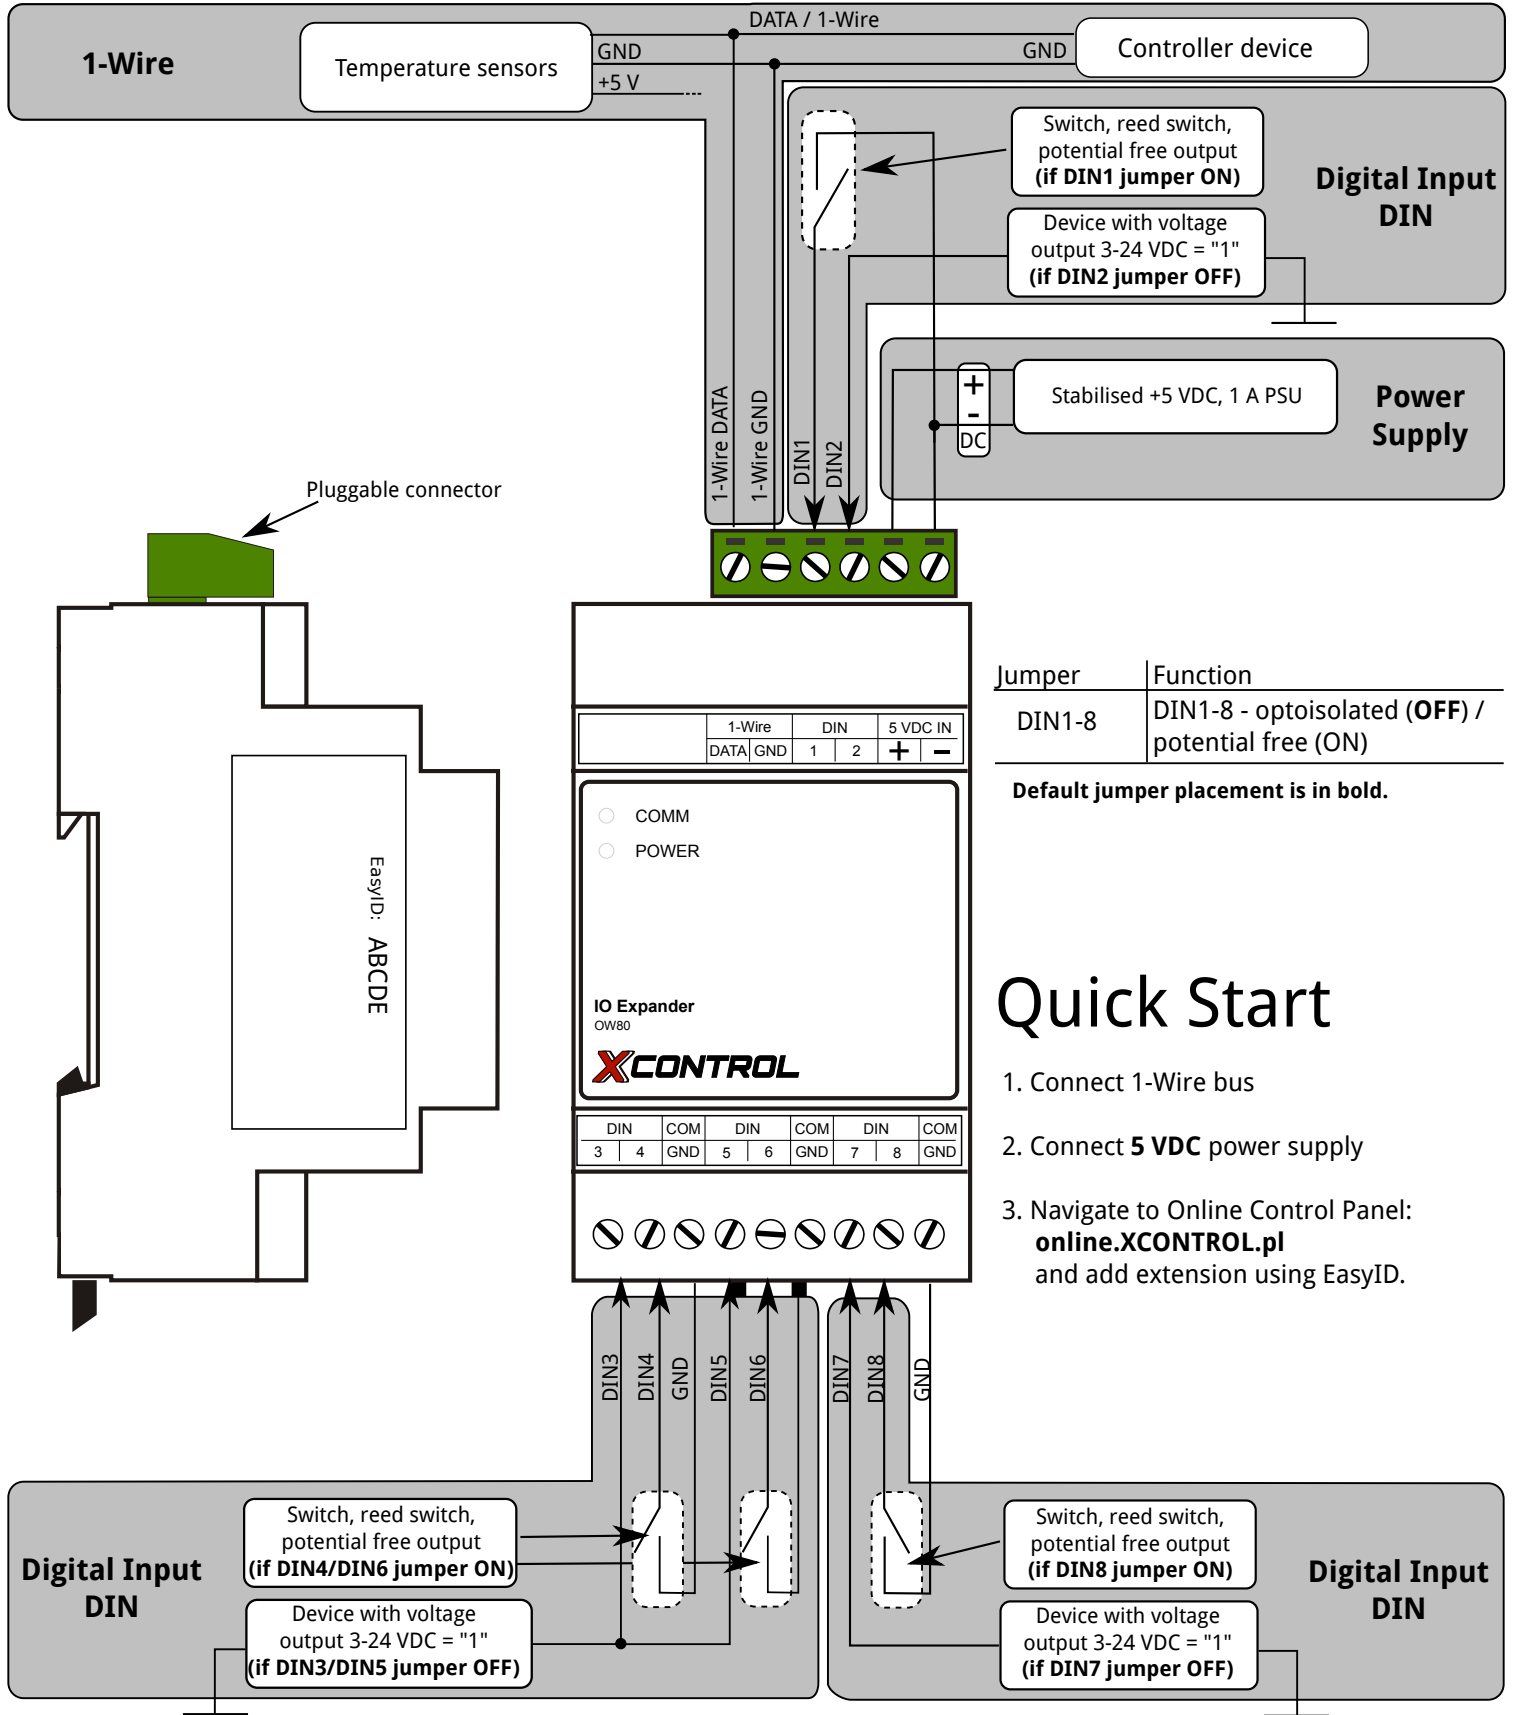

Jumper	Function
DIN1-8	DIN1-8 - optoisolated ( <b>OFF</b> ) / potential free ( <b>ON</b> )

Default jumper placement is in bold.

## Quick Start

1. Connect 1-Wire bus
2. Connect **5 VDC** power supply
3. Navigate to Online Control Panel: **online.XCONTROL.pl** and add extension using EasyID.

Hardware Serial Number

EasyID Registration Code